





The controls are located on the left hand side of the stage, behind the curtains, looking from the hall.

1. Ensure the cable leading to the screen is plugged into the strip of power sockets and that the supply to the strip sockets is switched on at the wall.
2. The screen can be used either with the stage steps in position, or removed, as shown in the image above.
3. The up/down controller is located on the back of the white pillar shown in the image above.
4. Use the  and  arrows to start downward and upward movement. Use  to stop the movement at any time.
5. With the stage steps removed, allow the screen to fall in front of the line of the floor, as shown in the image above.
6. With the steps in place, stop the screen before it touches the floor.
7. There is an automatic stop at the top of the stroke when the screen is withdrawn into its housing – there is no need to press  stop.